



Legend 1

For FortiGate80E/90E

Lock the Phillips Screws

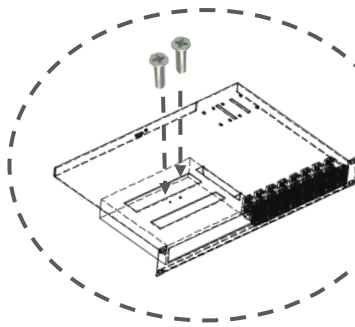

Back of the RI-FG80A

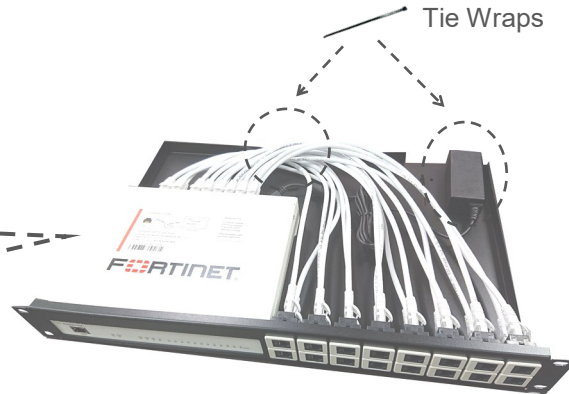


Legend 2

For FortiGate90D



Remove the screw

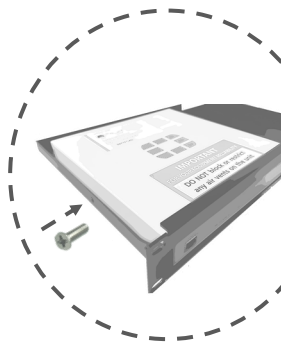

Lock the Phillips Screw



How to Install

- 1) Place your Fortinet Appliance in your RI-FG80A .
- 2) For FortiGate80E/90E- Fix with the Phillips Screws on the back of the RI-FG80A .(Please see the legend 1)
- 3) For FortiGate90D-Remove the screw on the left side of the Fortinet Appliance, place your Fortinet Appliance in your RI-FG80A, and fix with the Phillips Screw on the left side of the RI-FG80A.(Please see the legend 2)
- 4) Place the power supply on the RI-FG80A and tie it down with the 2 Tie Wraps.
- 5) Connect the cables from the connectors to your Fortinet Appliance, and fix with the Tie Wrap on the bridge hole at the rear of the RI-FG80A .

Package Contents



RI-FG80A x1



Tie Wrap x3



Phillips Screw x4



UTP Cat6 Patch Cord x16