

Model: RI - PA400


Quick Installation Guide

Support Appliance: Paloalto

PA-440 / PA-450 / PA-460



Remove the bottom screw

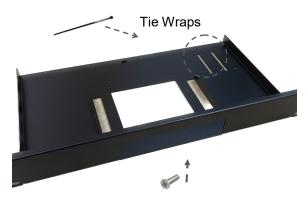

Lock the Phillips Screw on bottom

How to Install

- Remove the screw on the bottom of the Paloalto Appliance, place your Paloalto Appliance in your 1) RI-PA400, and fix with the Phillips Screw on the bottom of the RI-PA400.
- Place the power supply on the RI-PA400 and tie it down with the 2 Tie Wraps. 2)
- Connect the cables from the connectors to your Paloalto Appliance, and fix with the Tie Wrap on the 3) bridge hole at the rear of the RI-PA400.

Package Contents



RI-PA400 x1



Phillips Screw x2



Tie Wrap x3